

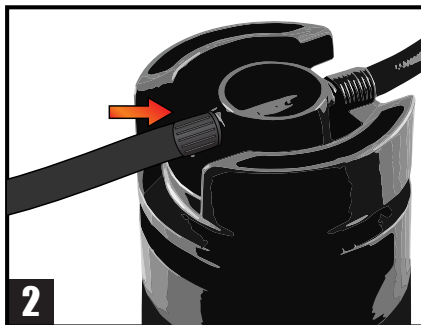


# HOW DO I INSTALL SLIME RESCUE™ SEALANT?

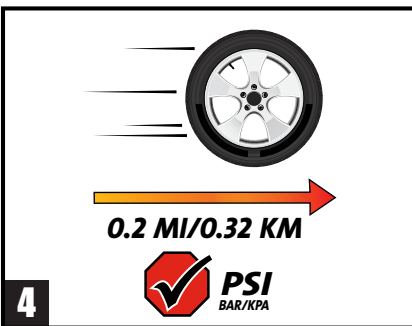

1  
Unwrap hose from sealant bottle and screw onto tire valve stem.

2  
Remove the cap from the valve on the bottle and connect to air source.

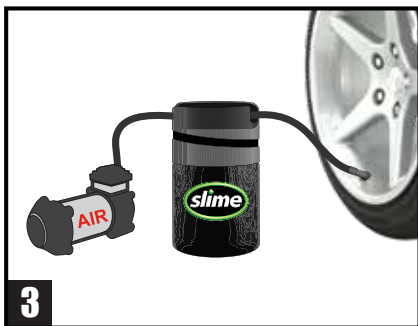

3  
Turn on inflator. The inflator will inject sealant and air into tire. Allow tire to fully inflate.

4  
Disconnect inflator and bottle from tire. Drive for 2.0mi (3.2km) and stop to verify that puncture has been sealed.